


Pro Mags Gauge Wheel Stop (SOLD SEPARATELY)

Thank you for purchasing the new Pro Mags gauge wheel stop. This stop prevents gauge wheels from dropping so far when raising the planter and prevents premature wear on gauge wheel arms, pivots, and bushings. Get more life out of your parts by following these simple steps.


1. Remove the gauge wheel and arm from the row unit.
2. Remove forward bolt from tailstock of row unit.
3. Run aforementioned bolt shank-first through wheel stop mounting hole and thread back into row unit.

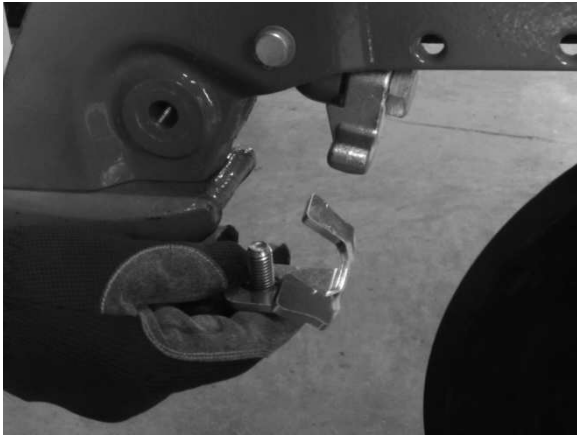

4. Ensure wheel stop curvature faces toward the opening disks and bends are wrapped around the frame of the tailstock. Hand tighten bolt once in proper position.



5. Tighten bolt securely.

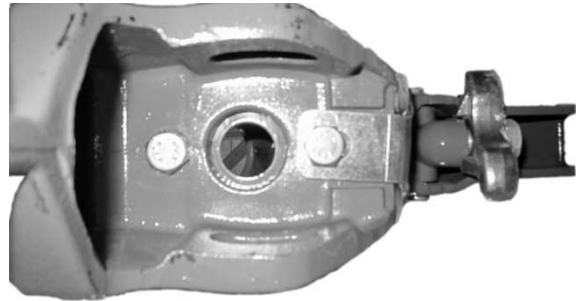

6. Replace and tighten the gauge wheel and arm back onto the row unit.